


895V

Non-return valve with dual-plate
05 System

Technical Data Sheet

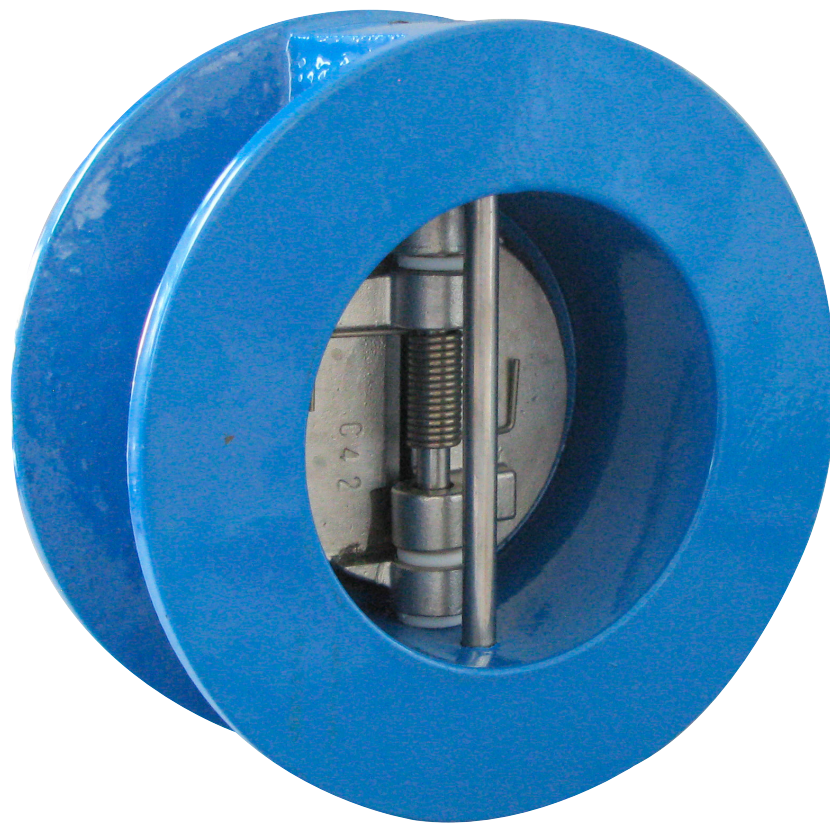

Description

The 895 non-return valve's tightness is ensured by the spring force distribution on the plates guaranteeing a good press on the seat's seal.

- Operating position : horizontal and vertical ascending and descending
- Compact
- Very low head loss
- FKM seal



895 V

Non-return valve with dual-plate - 05 System

DN	PN	PFA in bar	PS in bar				Cat.	Ref.	Weight Kg
			L1	L2	G1	G2			
2	50	10/16	16	16	16	16	I	149B3000V	1,2
2 1/2	65	10/16	16	16	16	15	I	149B3001V	1,8
3	80	10/16	16	16	16	12	I	149B3002V	2,9
4	100	10/16	16	16	16	10	I	149B3003V	3,9
5	125	10/16	16	16	16	0,5	I	149B3004V	5,8
6	150	10/16	16	13	16	0,5	I	149B3005V	8
8	200	10/16	16	10	16	0,5	I	149B3006V	14
10	250	10/16	16	10	16	0,5	I	149B3007V	22
12	300	10/16	16	10	16	0,5	I	149B3008V	34
16	400	10/16	16	10	16	x	I	149B3010V	83

Important notice :


The indicated pressure for the different categories of fluids (L1/L2/G1/G2) is under no condition a guarantee of use. Therefore, it is essential to validate the use of products under given operating conditions. The operating instructions are available on our website www.socla.com or by requesting from our sales department.

Technical features

Operating temperature	-10 to 80°C, for temperatures over 80°C consult us
Permissible operating pressure (PFA) in water	See table above
Maximum permissible pressure (PS) other mediums	See table above
Connection	Mounting between flanges, PN : see table
Mediums	Not loaded liquids, gas, hydrocarbons

Nomenclature and materials

N°	Description	Materials
1	Body	DN 50 to 150 Cast iron / Epoxy DN 200 to 400 Cast iron / Epoxy
2	Plates	Stainless steel
3	Seal	FKM
4	Spring	Stainless steel
5	Stem	Stainless steel
6	Bearings	PTFE
7	Eye bolt	DN > 150 Steel XC15
8	Plug	Brass

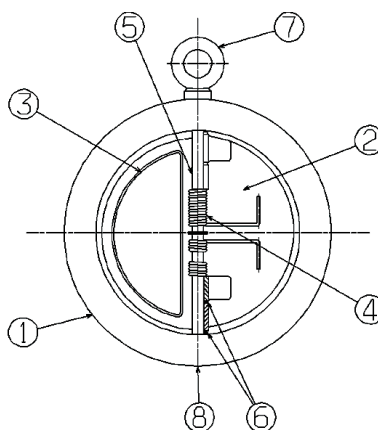

Approvals



PED 2014/68/UE



International construction Standards :

Directive 2014/68/UE

Flange drilling according to EN 1092-2

Overall dimensions according to EN558-1 series 50

Application

Pumping, water distribution, main circuits, hydrocarbons.

Use of these valves on circuits equipped with piston pump or piston compressor is not recommended.

Installation

Installation :

Before putting valve into operation, check that:

- the working conditions are compatible with the details given on the identification plate, the instruction notice and the manufacturer's detail,
- the valve works effectively when tried (carry out a few opening and closing operations of the closing system),
- the valve is free-pollution inside.

On a new installation or after maintenance, the circuit must be rinsed with the valve completely open in order to remove solid matter which may damage the internal parts of the valve.

Commissioning :

The installation should be put under pressure progressively to avoid damage which might occur to internal components.

Make sure that when flow stops the valve maintains pressure well and that there is no water-hammer which might damage the valve or installation.

If there is water-hammer, an anti-water hammer system must be added to the installation.

During a prolonged stoppage, a change in the state of the fluid may result in damage when the installation is brought back into service (solidification...).

Establish an adequate procedure program for cleaning the system.

Maintenance

• Removing :

1. Unscrew the 4 plugs (N° 5) and remove the 4 seals (N° 4).
Tip over the body (N° 1) if necessary
2. Remove the upper stem (N° 3)
3. Use this to remove the lower stem (N° 3)

WARNING: Keep the springs (N° 8 and 8*) in compression during this operation.


Remove the 2 plates (N° 9) and the bearings (N° 6 and 6*)

• Reassembly :

Before reassembling the valve, check the condition of the seal. If necessary, clean and grease it by using appropriate grease.

1. Put in place 2 seals (N° 5) on the same side of the body (N° 1)
 2. Thread 2 plugs (N° 5) on the same side with a stop on the body (N° 1)
 3. Place the 2 wings flat (N° 9) on the body (N° 1)
 4. Engage the lower stem (N° 3) by sliding it into the body (N° 1), while positioning in the following order :
 - The first bearing (N° 6)
 - The first ear of the plate (N° 9)
 - The second bearing (N° 6)
 - The first ear of the second plate (N° 9)
 - The spring (N° 7)
 - The bearing (N° 6*)
 - The spring (N° 8*)
 - The second ear of the plate (N° 9)
 - The third bearing (N° 6)
 - The second ear of second plate (N° 9)
 - The fourth bearing (N° 6)
 5. Push the stem against the seal (N° 4) by using the second stem to complete the operation
 6. Put in place the upper stem (N° 3)
 7. Place the 2 last seals (N° 4)
 8. Screwed the 2 last plugs (N° 5)
 9. Tighten then at Nm torques
- Once the reassembly completed, test the device to verify its tightness.


Type 895

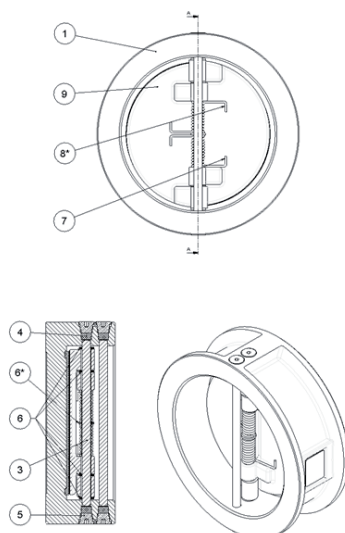

Operation

Direction for use :


- Solid line: Valve completely open
- Dotted line: opening stage of valve

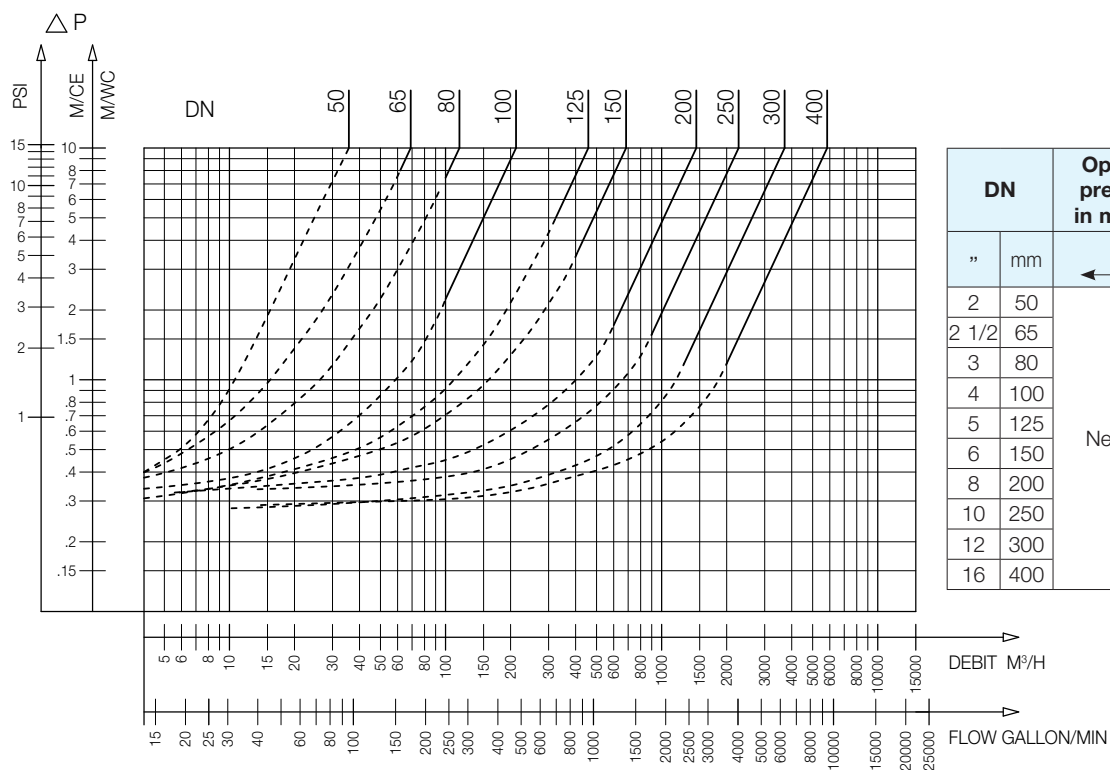

DN		Opening pressure in mm/CE	Kv	ζ
"	mm	Near to 0	m³/H	
2	50		35,7	7,81
2 1/2	65		69	5,9
3	80		116	4,8
4	100		212	3,6
5	125		458	1,9
6	150		685	1,7
8	200		1447	1,2
10	250		2271	1,2
12	300		3709	0,94
16	400		5837	1,2

Sizing

A	B	C	D
"	mm	mm	mm
2	50	54	109
2 1/2	65	54	129
3	80	57	144
4	100	64	164
5	125	70	194
6	150	76	220
8	200	95	275
10	250	108	330
12	300	143	380
16	400	191	491

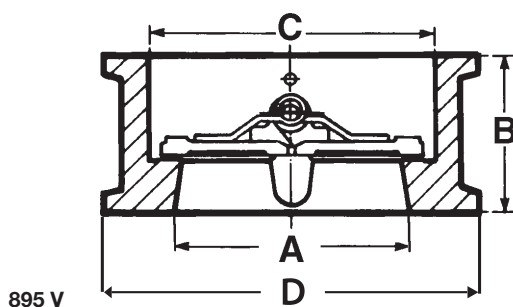

The descriptions and photographs contained in this product specification sheet are supplied by way of information only and are not binding.

Socla reserves the right to carry out any technical and design improvements to its products without prior notice. Warranty : All sales and contracts for sale are expressly conditioned on the buyer's assent to Socla terms and conditions found on its website at www.socla.com. Socla hereby objects to any term, different from or additional to Socla terms, contained in any buyer communication in any form, unless agreed to in a writing signed by an officer of Socla.



A WATTS Brand

Socla sas

365 rue du Lieutenant Putier • 71530 Virey-Le-Grand • France

Tel. +33 03 85 97 42 00 • Fax +33 03 85 97 42 42

contact@wattswater.com • www.socla.com

ISO 9001 version 2015 / ISO 18001